

MoboLink 4.0

Software

Mobolink dashboard column ICCID stand for what?

1. ICCID is SIM card's unique ID
2. Not show ICCID : mean SIM card is not installed.

How to configure volume from StageGo?

Please refer to below procedure

http://a2401.s3.amazonaws.com/cs/app/StageGo/Select_Full_Managed_in_Audio%E2%80%93Adjust_volume.docx

How do we operate the Drop Height event function on Mobolink?

If the drop setting is 0.5m, any drop height higher than 0.5m will be triggered.

What is the IP address required to use the cloud service of

Mobolink?

mobolink.ute.com

Which port should we use on MoboLink Server and Remote desktop server?

MBL Server TCPS/HTTPS/TTCPS/WebSocket(wss) port:443

Remote desktop server TCPS/HTTPS/TTCPS/WebSocket(wss) port:443

Agent

TCPS/HTTPS 443

TCPS/MQTT 1885

Remote desktop server TCPS/HTTPS/TTCPS/WebSocket(wss) port:443



Where can I access the MoboLink MDM REST API documentation?

MoboLink MDM REST API documentation is included as part of your MoboLink installation.

You can use a web browser and browse to the following URL to access your own REST API documentation.

https://<MoboLink_URL>/manual/

Please replace <MoboLink_URL> with your actual MoboLink server address.
Example URL for Cloud Subscription Customers:

<https://mycompany.mobolink.ute.com/mycompany/manual/>

Example URL for On-Prem Customers:

<https://10.1.3.4/manual/>

