

RM300

FW

Can RM300 support Thailand frequency?

Yes, you need to apply below setting script

http://w3.tw.ute.com/pub/cs/product/rm300/TAILAND_indytool_batch.txt

Which of RM-300 FW version is supporting Raspberry pi?

For supporting Raspberry pi, the F/W of RM300 is : V2.4 & V2.6

Which of RM-300 FW version is supported Ubuntu (Linux)?

For supporting Ubuntu (Linux), the F/W of RM300 is : V2.6 only.

How to know the FW of RM300?

To check the F/W version of RM300, please connect RM300 via USB or RS232 interface then use "INDY Tool" to check the "MAC version" after connected.

HW

How to setup 2 antenna automatically switch?

Please refer to attached document

http://w3.tw.ute.com/pub/cs/product/RM300/RM300-2_Port_antenna_automatically_switch.docx

Software

How to troubleshoot when using indytool in windows 10

with Uart port?

Please create a file "RFIDcomm.cfg" which have COM PORT NUM corresponding to RM300 , for example Port=3 and copy it into the same folder with indytool.exe when using indytool with RM300-2Port in Windows 10.