





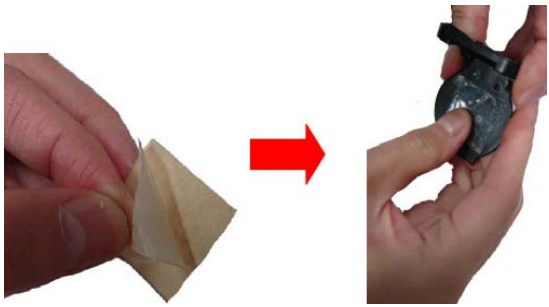

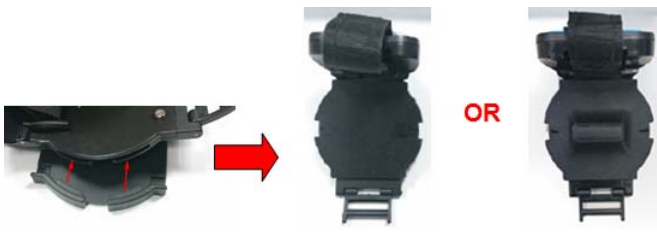
MS652Plus How to affix the rubber pad

Please follow the instruction below before installing the finger pad on MS652Plus.

We designed two different finger pads. One we pre-installed and you will notice is flat, it designed it for people with larger fingers. The other has a ridge and we designed to give more stability for people with smaller fingers. We have used a non-permanent tape to factory install the flat finger pad. If you wish to change to the other finger pad, and make the pad you choose permanently affixed, please use the included tape with the brown color. The brown color tape is permanent.

<i>Permanent tape</i>	<i>Non permanent tape (for practice use)</i>	<i>Flat Finger pad (pre-installed)</i>	<i>Finger pad with a ridge</i>
			

For permanent use, affix the brown tape as shown here:

	Slightly hold the tip of the release paper and peel off the brown protective film and attach it to the trigger module. Do not peel off the release paper yet.
	Grab the tip of the release paper and to peel it off from the trigger module.
	Put the finger pad on the trigger module and stick into the groove from four edges to fix the finger pad.