

4-port RFID UHF IoT Reader

- RS804 -



Package

Please make sure the following contents are in the RS804 gift box. If something is missing or damaged, please contact your unitech representative.

The basic package contents

- RS804 4-port RFID UHF IoT Reader
- RFID Tags (5 pcs)
- Adapter


SKU NO.

- RS804-34EBS4G
- RS804-44ABS4G
- RS804-44JBS4G


Quick Start Guide

V1.2


Product View (Front View)

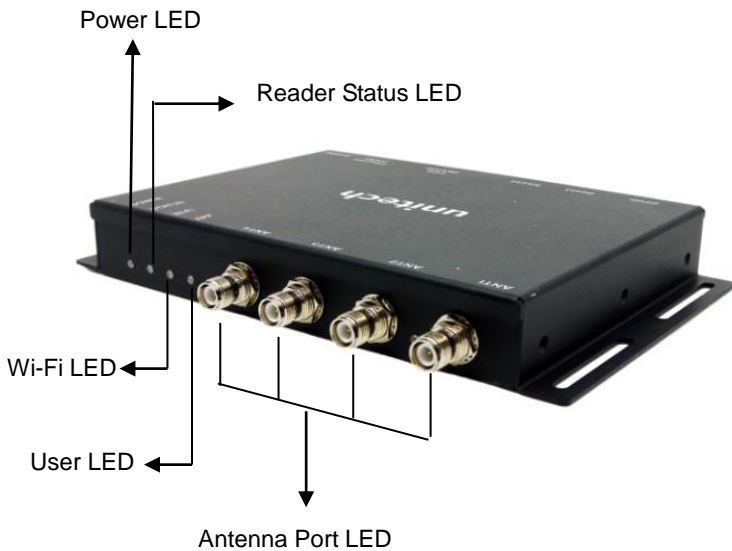

Product View (Rear View)

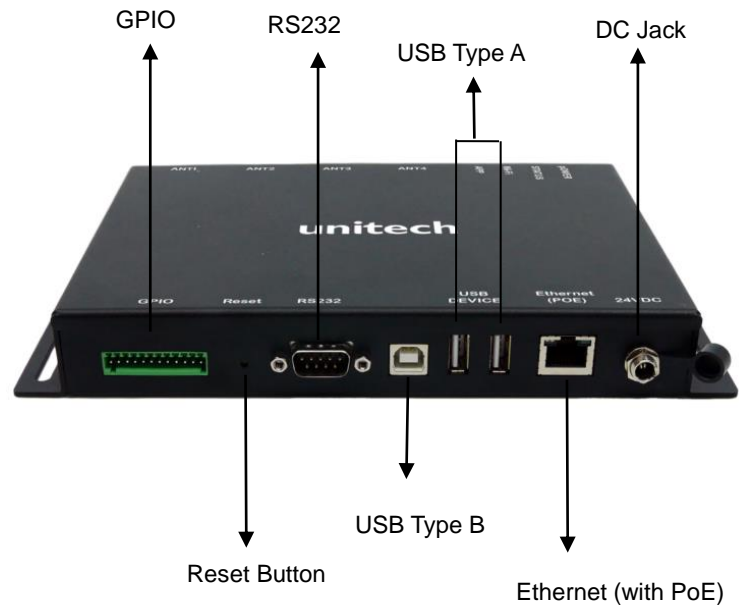

GPIO Pin Definition

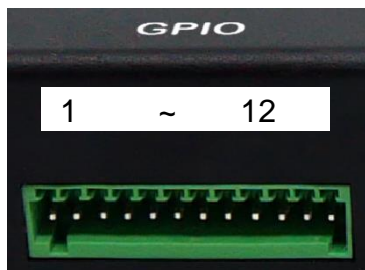


Pin No.	Description	Pin No.	Description
1	24V/1A power output	7	GND_IO1
2	GND	8	GPI_3
3	GPI_1	9	GPI_4
4	GPI_2	10	GPO_3
5	GPO_1	11	GPO_4
6	GPO_2	12	GND_IO2

Getting Started

Step 1. For the first use, please go to <https://www.ute.com/en/products/detail/RS804> download “RS804 RFID Utility” and then activate the utility.



Step 2. Please connect RS804 to a power source and connect USB or POE directly to PC.

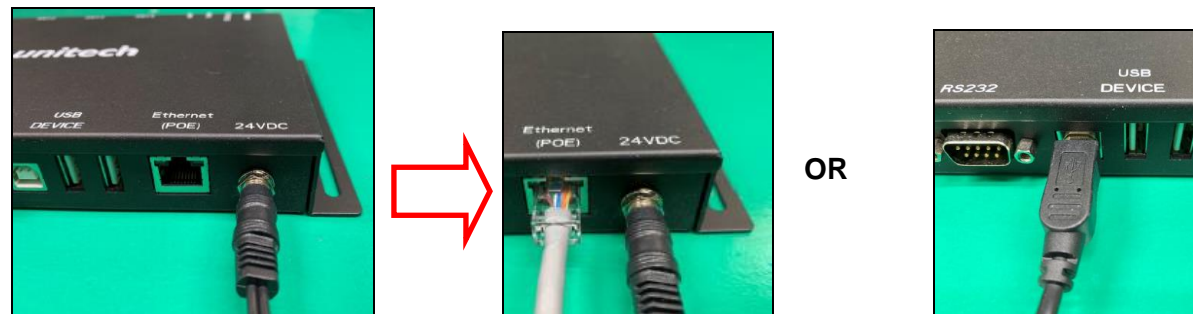

Step 3. When RS804 is connected to a power source, please check the LED status to make sure when to connect with the utility. Please noted that if the power is off and restarts it again, the LED process will start over from the beginning.

When the power is on :

Power LED : Green Solid On

Status LED : Step 1 : Red Solid (for about 12 secs)
Step 2 : Red Flashing (for about 25 secs)

LED goes off for about 50 secs (LLRP is about to start.)

Step 3 : Green Flashing: Ready to connect with the utility
(Users now may start to connect RS804 to the PC/ Laptop)


Step 4 : Green Solid: successfully connected

Checking the LED status

LED	Description
Power LED	<p>Off: Power Off</p> <p>Alternating Orange and GREEN: F/W upgrade</p> <p>Green Solid: Power On, No F/W upgrade</p>
Status LED	<p>Red Solid: System powering up, bootloader stage</p> <p>Red Flashing: RFID module not available, Linux system operation in progress.</p> <p>Green Flashing: Ready to connect with the utility</p> <p>Green Solid: Connected, no errors</p>
Wi-Fi LED	<p>Off: No Wi-Fi connected</p> <p>Green Solid: Wi-Fi connected</p> <p>Red Flashing: Data Transmission</p>
User LED	Controlled by User
Antenna LED	<p>Off: Antenna isn't operating</p> <p>Green Solid: Antenna is operating</p>

IP Setting


Step 1. Open in any Internet browser and type in : <https://192.168.7.1>

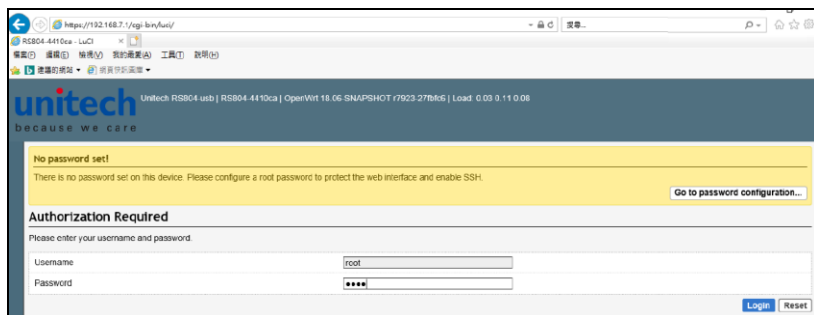

Step 2. Input “Username” as “root” and “Password” as null to login

Status	No password set!	
Overview	There is no password set on this device. Please configure a root password to protect the web interface and enable SSH.	
Routes	Go to password configuration...	
System Log	Status	
Kernel Log	System	
System	Hostname	RSB04-4410ca
Services	Model	Unitech RSB04-usb
Network	Architecture	ARMv7 Processor rev 2 (v7l)
RFID	Firmware Version	OpenWrt 18.06-SNAPSHOT (7923-27866) / LuCI openwrt-18.06 branch (git-20.162.09664-866e2ee)
Statistics	Kernel Version	4.14.149
Logout	OS Version	#200913 PREEMPT Thu Aug 13 01:13:07 2020
	Local Time	Sat Jan 1 08:11:14 2000
	Uptime	0h 11m 16s
	Load Average	0.03, 0.09, 0.08


Step 3. Click **“Network”** then **“Interfaces”**, RS804 was assigned IP with **“192.168.116.43”** as an example.

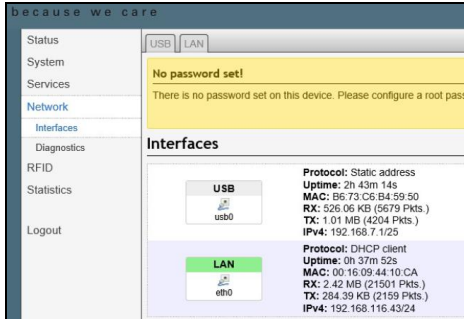

Step 4. Click **“Edit”** to set IP address



Step 5. Input **“192.168.116.100”** for static IP address as example then click **“Save & Apply”**

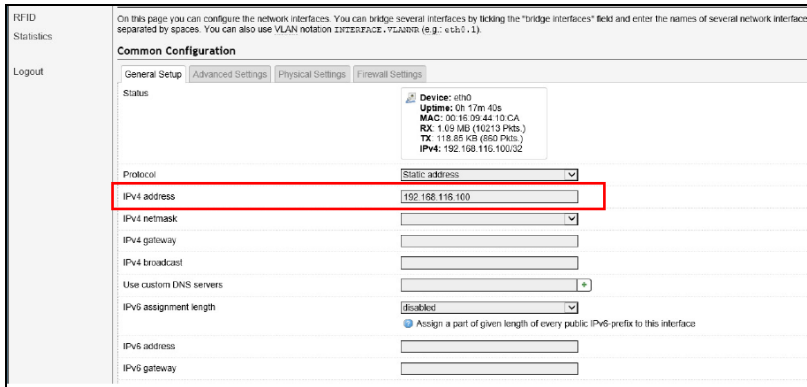

Wi-Fi Dongle Information

RS804 supports Wi-Fi in order to increase installation flexibility.

To purchase Wi-Fi dongles, please check the below information for your reference.

(The dongles below have been successfully tested.)

Brand	Standard & Protocol	Wireless Speed	Frequency
ASUS USB-N10 v2	IEEE 802.11 b/g/n	150 Mbps	2.4GHZ
D-Link DWA-127	IEEE 802.11 b/g/n	150 Mbps	2.4GHZ
Tenda W311MA	IEEE 802.11b/g/n	150Mbps	2.4GHZ
TOTOLINK N150UA	IEEE 802.11b/g/n	150Mbps	2.4GHZ
TOTOLINK N150USM	IEEE 802.11b/g/n	802.11n: Up to 150Mbps 802.11g: Up to 54Mbps (dynamic) 802.11b: Up to 11Mbps (dynamic)	2.4~2.4835GHz

CAUTION! ■ To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.

■ If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.